



Glass Cup Warmer

Bedienungsanleitung

Instructions for use

Mode d'emploi

Istruzioni per l'uso

Gebruiksaanwijzing

Modo de empleo

Manual de instruções

Bruksanvisning

Instruksjonsbok

Instrukcja obsługi

Руководство по эксплуатации

Návod k obsluze

de

en

fr

it

nl

es

pt

sv

no

pl


ru

cs

Your Glass Cup Warmer

- 1 Control elements 7
- 2 For your safety 8
 - Comply with the instructions for use 8
 - Proper use 8
 - For your safety 8
- 3 Setting up and connecting 10
 - (Optional) Change the stand feet for the GIGA line 10
- 4 Warming cups 10
- 5 Cleaning and maintenance 10
- 6 Transport and environmentally neutral disposal 11
- 7 Technische Daten 11
- 8 JURA contact details / Legal information 11

1 Control elements

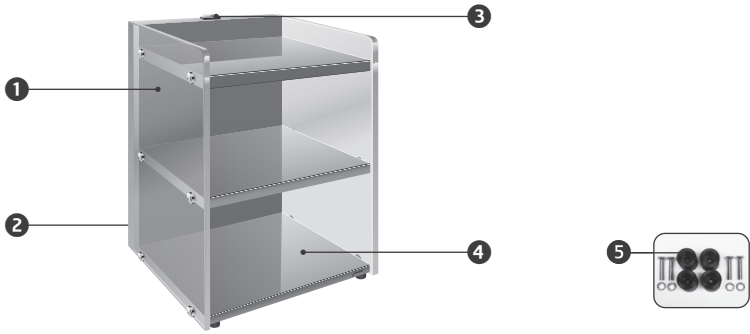

- 1 Glass Cup Warmer
- 2 Plug-in mains cable (back of the machine)
- 3 Power switch (with red indicator light)
- 4 Cup tray
- 5 Optional feet for GIGA line

- de
- en
- fr
- it
- nl
- es
- pt
- sv
- no
- pl
- ru
- cs

2 For your safety

Comply with the instructions for use

Before using the machine, read these instructions for use thoroughly and completely and comply with the instructions they contain. Keep these instructions for use close to the machine and pass them on to the next user.

Failure to observe the instructions for use may result in serious injuries or damage to property. Safety information is therefore indicated as follows:

WARNING

Indicates circumstances that may result in serious injuries or death.

CAUTION

Indicates circumstances that may result in minor injuries.

CAUTION

Indicates circumstances that may result in damage to property.

The cup warmer may only be operated by instructed persons. Non-professionals must be supervised during use.

Proper use

This machine is intended for use by specialised or trained staff in restau-

rants, canteens, hospitals and commercial premises such as bakeries, butcheries etc., or for commercial use by laypersons. The machine must not be positioned in publicly accessible areas. The cup warmer is used to warm cups on the heated trays. Use for any other purpose will be deemed improper. JURA cannot accept any responsibility for the consequences of improper use.

For your safety

Please carefully read and observe the important safety information set out below. To avoid danger of potentially fatal electric shock:

- Never use a machine which is damaged or has a defective mains cable.
- Never start the machine with wet hands.
- Before starting the machine, ensure that the mains cable is dry.
- Only use the mains cable unit supplied as standard to connect the machine to the alternating current network.
- In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from the mains supply and contact JURA service.

- If the mains cable of this machine is damaged, it must be repaired either directly by JURA or by an authorised JURA service centre.
- Make sure that the cup warmer and the mains cable are not located close to hot surfaces or naked flames.
- Be careful to ensure that the mains cable is not trapped and does not rub against sharp edges.
- Never open and repair the machine yourself. Do not modify the machine in any way that is not described in the instructions for use. The machine contains live parts. Repairs may only be carried out by authorised JURA service centres, using original spare parts and accessories.
- Do not immerse the cup warmer, cable or connections in water.
- Do not put the cup warmer or any individual parts in the dishwasher.
- Switch the cup warmer off before cleaning and disconnect the mains plug. Always wipe the cup warmer with a damp cloth rather than a wet one, and protect it from prolonged exposure to water splash.
- The machine is not suitable for installation on surfaces where a jet of water may be used.
- The machine must not be cleaned with a jet of water or steam cleaner.
- Only connect the machine to the mains voltage in accordance with the information on the rating plate. The rating plate is located on the underside of your cup warmer. Further technical data is given in these instructions for use (see Chapter 7 “Technical Data”).
- Switch the machine off if you are going to be absent for a longer period of time.
- Only operate the machine when supervised.

A defective machine is not safe and could cause injury or fire. To avoid damage and any associated risk of injury or fire:

- Never allow the mains cable to loosely hang down. The mains cable could pose a tripping hazard or become damaged.
- Protect your cup warmer from environmental influences such as rain, frost and direct sunlight.

People, including children, who

- do not have the physical, sensory or mental capabilities to use the machine safely or
- are inexperienced or lack knowledge in how to use the machine safely

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

3 Setting up and connecting

When setting up your cup warmer, please note the following:


- Set the machine down on a stable and horizontal surface.
- Choose a spot for your cup warmer which is protected against overheating. Leave a space between the cup warmer and automatic coffee machine to prevent build-up of heat.
- In the interests of hygiene, you should use a damp cloth to clean both the inside and outside of your new machine before starting it.

⚠ WARNING

If the machine is operated with a defective mains cable, there is a danger of potentially fatal electric shock.

- ▶ Never use a machine which is damaged or has a defective mains cable.
- ▶ Connect the mains cable to the cup warmer.
- ▶ Insert the mains plug into a power socket.

(Optional) Change feet for GIGA line

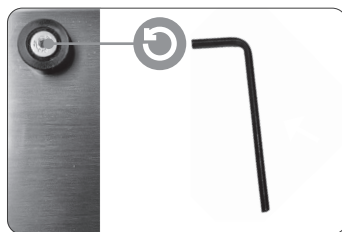


4 Warming cups

⚠ CAUTION

Risk of burns. The cup trays can get hot during operation.

- ▶ Do not touch the cup trays.

i For the best warming results, we recommend not stacking the cups on the top cup tray.

- ▶ Place the desired cups on the cup trays.
- ▶ Switch on the cup warmer using the power switch  on the top of the machine. The red indicator light lights up. The machine starts to warm the cups.

i To end the heating process, switch off the machine using the power switch on the top of the machine. The red indicator light is no longer lit up.

5 Cleaning and maintenance

i Do not use harsh or abrasive cleaning agents or hard objects for cleaning. This may damage the cup warmer.

- ▶ Before cleaning the machine, remove the mains plug from the power socket.
- ▶ Clean the machine and cup trays with a damp cloth.

6 Transport and environmentally neutral disposal

Keep the packaging for your cup warmer. It should be used to protect the machine during transport. Clean the cup warmer before transporting it.

Please dispose of old machines in an environmentally neutral way.



Old machines contain valuable, recyclable materials which should be recycled. Please therefore dispose of old machines via suitable collection systems.

7 Technische Daten

| | |
|--|--|
| Voltage | 220–240 V ~, 50/60 Hz |
| Conformity mark | CE UKA |
| Power | 66 W |
| Energy consumption when switched off | 0 watts |
| Holding capacity (cups stacked/arranged in staggered rows) | 60 coffee cups (80 mm in diameter) or 100 espresso cups (60mm in diameter) |
| Cable length | approx. 2 m |
| Weight | 15 kg |
| Dimensions (W × H × D) | 32 × 43.5 × 32 cm |

8 JURA contact details / Legal information

JURA Elektroapparate AG
Kaffeeweltstrasse 10
CH-4626 Niederbuchsiten
Tel. +41 (0)62 38 98 233

i You will find additional contact details for your country at [jura.com](https://www.jura.com).

Directives

The machine complies with the following directives:

- 2014/35/EU – Low Voltage Directive
- 2014/30/EU – Electromagnetic Compatibility
- 2009/125/EC – Ecodesign Directive

Technical changes

We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colours of the machine. Some details of your machine may vary.

de

en

fr

it

nl

es

pt

sv

no

pl

ru

cs